



## CS-06

### Climate Sensor with 70cm cable



#### **Operating Instruction:**

1. Climate Sensor CS-06 with Mini-USB plug and 70 cm cable. Connect cable into the destined socket at the measurement device.
2. Make sure that there is a free aircirculation through the ventilation holes.
3. Read out the measured value of the measurement device. After usage make sure to properly store the device to protect the sensors.
4. Measuring range; -10 .... +50 degree Celsius (Tol; +/- 0,3 degree), 10....99% Relative Humidity ( Tol; +/- 2% RH).